

ISOLATED DC-DC CONVERTER CQB100W14 SERIES APPLICATION NOTE



Approved By:

Department	Approved By	Checked By	Written By
Research and Development Department	Jacky	Astray/Elsie	Joyce
Design Quality Department	Benny	οίοί	



Contents

1. Introduction	3
2. Pin Function Description	3
3. Connection for Standard Use	4
4. Test Set-Up	4
5. Recommend Layout, PCB Footprint and Soldering Information	5
6. Features and Functions	5
6.1 UVLO (Under Voltage Lock Out)	5
6.2 Over Current/Short Circuit Protection	
6.3 Output Over Voltage Protection	6
6.4 Over Temperature Protection	6
6.5 Remote On/Off	6
6.6 Output Remote Sensing	7
6.7 Output Voltage Adjustment	
7. Input/Output Considerations	9
7.1 Input Capacitance at the Power Module	9
7.2 Hold up Time	
7.3 Input Derating Curve	
7.4 Output Ripple and Noise	
7.5 Output Capacitance	
8. Series and Parallel Operation	11
8.1 Series Operation	
8.2 Parallel Operation	
8.3 Redundant Operation	
9. Thermal Design	13
9.1 Operating Temperature Range	
9.2 Convection Requirements for Cooling	
9.3 Thermal Considerations	
9.4 Power Derating	
9.5 Quarter Brick Heat Sinks	
10. Safety & EMC	15
10.1 Input Fusing and Safety Considerations	
10.2 EMC Considerations	
,10.3 Suggested Configuration for RIA12 Surge Test	



1. Introduction


The CQB100W14 series of DC-DC converters offers 100 watts of output power at single output voltages of 5, 12, 15, 24, 28, 54VDC with industry standard quarter-brick. It has a ultrawide (14:1) input voltage range of 12 to 160VDC (72VDC nominal) and 3000VAC reinforced isolation.

Compliant with EN 50155, EN 45545, EN 50121-3-2. High efficiency up to 90%, allowing case operating temperature range of -40°C to 105°C. An optional heat sink is available to extend the full power range of the unit. Very low no load power consumption (20mA), an ideal solution for energy critical systems.

The standard control functions include remote **on/off** (positive or negative) and +15% to -20% (except for $54V_{out}$ +10% to -20%) adjustable output voltage.

Fully protected against input UVLO (under voltage lock out), output over-current, output over-voltage, over-temperature and continuous short circuit conditions.

CQB100W14 series is designed primarily for common railway applications of 24V, 36V, 48V, 72V, 96V, 110V nominal voltage and also suitable for distributed power architectures, telecommunications, battery operated equipment and industrial applications.

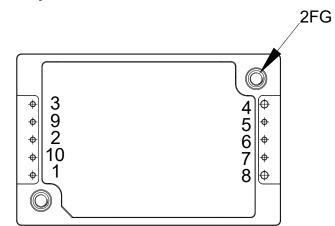

2	Pin	Function	Description
~ .		i unction	Description


No	Label	Function	Description	Reference
1	+Vin	+V Input	Positive Supply Input	Section 7.1/7.2/ 7.3
2	ON/OFF	On/Off	External Remote On/Off Control	Section 6.5
3	-Vin	-V Input	Negative Supply Input	Section 7.1/7.2/7.3
4	-Vo	-V Output	Negative Power Output	Section 7.4/7.5
5	-Sen	-Sense	Negative Output Remote Sense	Section 6.6
6	Trim	Trim	External Output Voltage Adjustment	Section 6.7
7	+Sen	+Sense	Positive Output Remote Sense	Section 6.6
8	+Vo	+V Output	Positive Power Output	Section 7.4/7.5
9	Bus	Bus	Pre-Regulator Voltage Output (Option)	Section 7.2
10	UVLO	UVLO	External UVLO Function (Option)	Section 6.1
		Mounting Insert	Mounting Insert (FG)	Section 9.5/10.2

Note: Base plate can be connected to FG through M3 threated mounting insert. Recommended torque 3Kgf-cm.



3. Connection for Standard Use

The connection for standard use is shown below. An external input capacitor (C1) 220uF for all models is recommended to reduce input ripple voltage. External output capacitors (C2, C3) are recommended to reduce output ripple and noise, 10uF polymer tantalum and 1uF ceramic capacitors for all models.

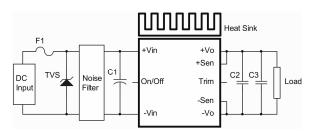

0	
Component	Reference
Input fuse, TVS	Section 10.1
External capacitor on the input side	Note Section 7.2
External capacitor on the output side	Section 7.4/7.5
External input noise filter	Section 10.2
External remote on/off control	Section 6.5
External output voltage adjustment	Section 6.7
External heat sink	Section 9.2/9.3/9.4/9.5
	Section 6.6
	Input fuse, TVS External capacitor on the input side External capacitor on the output side External input noise filter External remote on/off control External output voltage adjustment

Note:

If the impedance of input line is high, C1 capacitance must be more than above. Use more than two recommended capacitors above in parallel when ambient temperature becomes lower than -20°C.

4. Test Set-Up

The basic test set-up to measure parameters such as efficiency and load regulation is shown below. When testing the modules under any transient conditions please ensure that the transient response of the source is sufficient to power the equipment under test. We can calculate:

- Efficiency
- Load regulation and line regulation

The value of efficiency is defined as:

$$\eta = \frac{V_o \times I_o}{V_{in} \times I_{in}} \times 100\%$$

Where:

V_o is output voltage, I_o is output current, V_{in} is input voltage, I_{in} is input current

The value of load regulation is defined as:

Load reg. =
$$\frac{V_{FL} - V_{NL}}{V_{NL}} \times 100\%$$

Where:

 V_{FL} is the output voltage at full load V_{NL} is the output voltage at no load


The value of line regulation is defined as:

$$Line \ reg. = \frac{V_{HL} - V_{LL}}{V_{LL}} \times 100\%$$

Where:

 V_{HL} is the output voltage of maximum input voltage at full load

 V_{LL} is the output voltage of minimum input voltage at 80% full load



CQB100W14 Series Test Setup

C1: 220uF/200V ESR<0.047Ω


C2: 1uF/1210 ceramic capacitor


C3: 10uF polymer tantalum capacitor (ESR $\leq 0.05\Omega$)



5. Recommend Layout, PCB Footprint and Soldering Information

The system designer or end user must ensure that metal and other components in the vicinity of the converter meet the spacing requirements for which the system is approved. Low resistance and inductance PCB layout traces are the norm and should be used where possible. Due consideration must also be given to proper low impedance tracks between power module, input and output grounds.

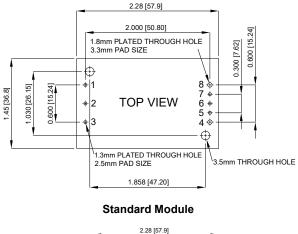

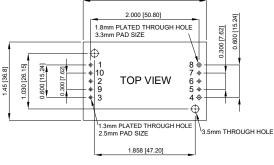


Option -B Module

Clean the soldered side of the module with a brush, prevent liquid from getting into the module. Do not clean by soaking the module into liquid. Do not allow solvent to come in contact with product labels or resin case as this may changed the color of the resin case or cause deletion of the letters printed on the product label. After cleaning, dry the modules well.

The suggested soldering iron is 450°C for up to 5 seconds (less than 50W). Furthermore, the recommended soldering profile is shown below, and PCB layout is referring to **section 10.2**.


Lead Free Wave Soldering Profile

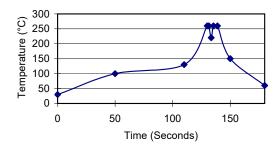

6. Features and Functions

6.1 UVLO (Under Voltage Lock Out)


Input under voltage lockout is standard on the CQB100W14 series unit. The unit will shut down when the input voltage drops below a threshold, and the unit will operate when the input voltage goes above the upper threshold.

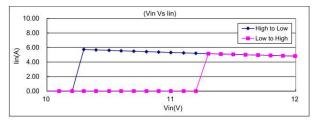

And the CQB100W14 series has an adjustable under voltage lockout which will shut down the converter according to following settings.

Nom. Input Voltage (VDC)	24	36	48	72	110
Turn Off	13.8	20.8	28.0	42.5	53.0
Threshold (VDC)	±0.75	±0.75	±1.0	±1.5	±3.0
Turn On	14.8	21.8	29.0	43.5	54.0
Threshold (VDC)	±0.75	±0.75	±1.0	±1.5	±3.0
R1 Resistor (KΩ) (UVLO to +V _{in})	Open	Open	Open	Open	240
R2 Resistor (KΩ) (UVLO to -V _{in})	18.84	6.1	3.64	2.0	1.18





C1: 220uF/200V ESR<0.047Ω

C4: 0.01uF/50V ceramic capacitor


Note:

If need to configure UVLO turn off threshold to 10Vdc, please make sure the output power is no more than 80W, even though the 11V operating is short duration.

And the module operating between input 12Vdc to 16Vdc, please make sure the output power is no more than 80W.

6.2 Over Current/Short Circuit Protection

All models have internal over current and continuous short circuit protection. The unit operates normally once the fault condition is removed. At the point of current limit inception, the converter will go into hiccup mode protection.

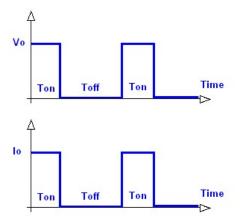

6.3 Output Over Voltage Protection


The output over voltage protection consists of circuitry that internally limits the output voltage. If more accurate output over voltage protection is required, then an external circuit can be used via the remote **on/off** pin.

Note:

Please note that device inside the power supply might fail when voltage more than rate output voltage is applied to output pin. This could happen when the customer tests the over voltage protection of unit. OVP can be tested by using the TRIM UP function. Consult us for more information.

6.4 Over Temperature Protection

These modules have an over temperature protection circuit to safeguard against thermal damage. Shutdown occurs with the maximum case reference temperature is exceeded. The module will restart when the case temperature falls below over temperature recovery threshold. Please measure case temperature of the center part of aluminum base plate.

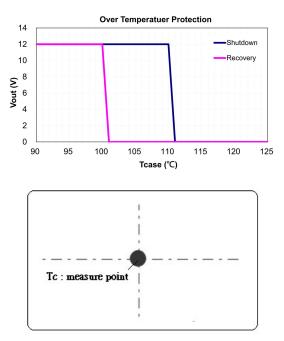

6.5 Remote On/Off

The CQB100W14 series allows the user to switch the module on and off electronically with the remote **on/off** feature. All models are available in "positive logic" and "negative logic" (optional) versions. The converter turns on if the remote **on/off** pin is high (>3.5Vdc to 160Vdc or open circuit). Setting the pin low (0 to<1.2Vdc) will turn the converter off. The signal level of the remote **on/off** input is defined with respect to ground.


If not using the remote **on/off** pin, leave the pin open (converter will be on).

Models with part number suffix "N" are the "negative logic" remote **on/off** version. The unit turns off if the remote **on/off** pin is high (>3.5Vdc to 160Vdc or open circuit). The converter turns on if the **on/off** pin input is low (0 to<1.2Vdc). Note that the converter is off by default.


Logic State (Pin 2)	Negative Logic	Positive Logic
Logic Low	Module on	Module off
Logic High	Module off	Module on



The converter remote **on/off** circuit built-in on input side. The ground pin of input side remote **on/off** circuit is $-V_{in}$ pin. Inside connection sees below.

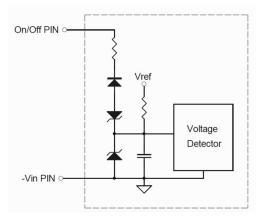

Connection examples see below.

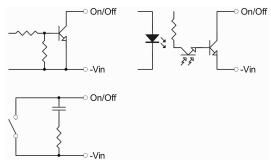

Remote On/Off Connection Example

6.6 Output Remote Sensing

The CQB100W14 series converter has the capability to remotely sense both lines of its output. This feature moves the effective output voltage regulation point from the output of the unit to the point of connection of the remote sense pins. This feature automatically adjusts the real output voltage of the CQB100W14 series in order to compensate for voltage drops in distribution and maintain a regulated voltage at the point of load. The remote-sense voltage range is:


For V_o=54V

 $\label{eq:constraint} \begin{array}{l} [(+V_{out}) - (-V_{out})] - [(+Sense) - (-Sense)] \\ 10\% \mbox{ of } V_{o \mbox{ nominal}} \end{array}$


For Others

 $\label{eq:constraint} \begin{array}{l} [(+V_{out}) - (-V_{out})] - [(+Sense) - (-Sense)] \\ 15\% \mbox{ of } V_{o_nominal} \end{array}$

When remote sense is in use, the sense should be connected by twisted-pair wire or shield wire. If the sensing patterns short, heave current flows and the pattern may be damaged. Output voltage might become unstable because impedance of wiring and load condition when length of wire is exceeding 400mm. This is shown in the schematic below.

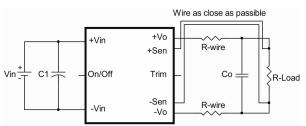

If the remote sense feature is not to be used, the sense pins should be connected locally. The +Sense pin should be connected to the +V_{out} pin at the module and the -Sense pin should be connected to the -V_{out} pin at the module. Wire between +Sense and +V_{out} and between -Sense and -V_{out} as short as possible. Loop wiring should be avoided. The converter might become unstable by noise coming from poor wiring. This is shown in the schematic below.

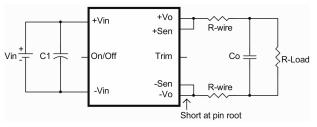


Note:

Although the output voltage can be varied (increased or decreased) by both remote sense and trim, the maximum variation for the output voltage is the larger of the two values not the sum of the values. The output power delivered by the module is defined as the voltage at the output terminals multiplied by the output current. Using remote sense and trim can cause the output voltage to increase and consequently increase the power output of the module if output current remains unchanged. Always ensure that the output power of the module remains at or below the maximum rated power. Also be aware that if Vo.set is below nominal value, $P_{out.max}$ will also decrease accordingly because $I_{o.max}$ is an absolute limit. Thus, $P_{out.max} = V_{o.set} \times I_{o.max}$ is also an absolute limit.




6.7 Output Voltage Adjustment


Output may be externally trimmed (+15% to -20%, except $54V_{out}$ is +10% to -20%) with a fixed resistor or an external trim pot as shown (optional). Model specific formulas for calculating trim resistors are available upon request as a separate document.

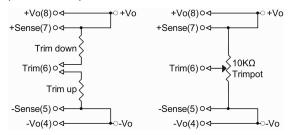

In order to trim the voltage up or down, one needs to connect the trim resistor either between the trim pin and -Sense for trim-up or between trim pin and +Sense for trim-down. The output voltage trim range is +15% to -20%, except $54V_{out}$, it is +10% to -20%. This is shown:

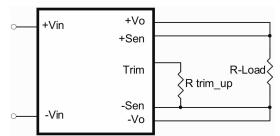

Trim-up Voltage Setup

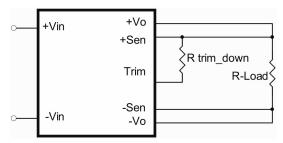

Trim-down Voltage Setup

The value of R_{trim_up} defined as:

$$R_{trim_up} = \left[\frac{V_r \times R1 \times (R2 + R3)}{R2 \times (V_o - V_{o,nom})}\right] - Rt \ (K\Omega)$$

Where:

R_{trim_up} is the external resistor in K Ω V_{o, nom} is the nominal output voltage V_o is the desired output voltage R1, R2, R3, Rt and Vr are internal to the unit and are defined in Table 1

Table 1 –	Trim up and	Trim down	Resistor	Values

Model Number	Output Voltage (V)	R1 (KΩ)	R2 (KΩ)	R3 (KΩ)	Rt (KΩ)	Vr (V)
CQB100W14-72S05	5.0	6.2	2.37	1	8.2	1.24
CQB100W14-72S12	12.0	6.8	2.37	2.2	10	2.5
CQB100W14-72S15	15.0	9.1	2.32	2.49	12	2.5
CQB100W14-72S24	24.0	15	2.43	5.9	20	2.5
CQB100W14-72S28	28.0	15.4	2.49	10	23.2	2.5
CQB100W14-72S54	54.0	36	2.43	14	51	2.5

For example, to trim-up the output voltage of 12V module (CQB100W14-75S12) by 15% to 13.8V, R_{trim_up} is calculated as follows:

R1=6.8KΩ, R2=2.37KΩ, R3=2.2KΩ, Rt=10KΩ, Vr=2.5V, Vo=13.8V, Vo, nom=12V

$$R_{trim_{up}} = \left[\frac{2.5 \times 6.8 \times (2.37 + 2.2)}{2.37 \times (13.8 - 12)}\right] - 10 = 8.2 \ (K\Omega)$$

The typical value of Rtrim_up

ine typi							
Trim	5V	12V	15V	24V	28V	54V	
up (%)			Rtrim_u	_p (ΚΩ)			
1%	210.44	263.17	302.45	515.62	666.51	1075	
2%	101.12	126.59	145.22	247.81	321.65	512.44	
3%	64.68	81.06	92.82	158.54	206.70	324.63	
4%	46.46	58.29	66.61	113.91	149.23	230.72	
5%	35.53	44.63	50.89	87.12	114.74	174.38	
6%	28.24	35.53	40.41	69.27	91.75	136.81	
7%	23.03	29.02	32.92	56.52	75.33	109.98	
8%	19.13	24.15	27.31	46.95	63.01	89.86	
9%	16.09	20.35	22.94	39.51	53.43	74.21	
10%	13.66	17.32	19.44	33.56	45.77	61.69	
11%	11.68	14.83	16.59	28.69	39.50		
12%	10.02	12.76	14.20	24.64	34.28		
13%	8.62	11.01	12.19	21.20	29.85		
14%	7.42	9.51	10.46	18.26	26.06		
15%	6.38	8.21	8.96	15.71	22.78		

The value of R_{trim_down} defined as:

$$R_{trim_{down}} = R1 \times \left[\frac{V_r \times R1}{R2 \times (V_{o,nom} - V_o)} - 1\right] - Rt \ (K\Omega)$$

Where:

 R_{trim_down} is the external resistor in K Ω Vo, nom is the nominal output voltage Vo is the desired output voltage.R1, R2, R3, Rt and Vr are internal to the unit and are defined in Table 1



For example: to trim-down the output voltage of 12V module (CQB100W14-72S12) by 20% to 9.6V, Rtrim_down is calculated as follows:

R1=6.8KΩ, R2=2.37KΩ, R3=2.2KΩ, Rt=10KΩ, Vr=2.5V, V_0=9.6V, V_0, nom=12V

$$R_{trim_{down}} = 6.8 \times \left[\frac{2.5 \times 6.8}{2.37 \times (12 - 9.6)} - 1\right] - 10$$

= 3.52 (KΩ)

The typical value of Rtrim_down

Trim down (%)	5V	12V	15V
Thin down (%)			
1%	387.84	389.67	573.80
2%	186.72	186.43	276.35
3%	119.68	118.69	177.20
4%	86.16	84.82	127.62
5%	66.05	64.49	97.88
6%	52.64	50.94	78.05
7%	43.06	41.27	63.89
8%	35.88	34.01	53.26
9%	30.29	28.36	45.00
10%	25.82	23.85	38.39
11%	22.17	20.15	32.98
12%	19.12	17.07	28.47
13%	16.54	14.47	24.66
14%	14.33	12.23	21.39
15%	12.42	10.30	18.56
16%	10.74	8.60	16.08
17%	9.26	7.11	13.89
18%	7.95	5.78	11.95
19%	6.77	4.59	10.21
20%	5.71	3.52	8.64


Trim down $(9/)$	24V	28V	54V		
Trim down (%)	R _{trim_down} (KΩ)				
1%	929.51	811.80	2382.14		
2%	447.25	386.60	1147.57		
3%	286.50	244.87	736.05		
4%	206.13	174.00	530.28		
5%	157.90	131.48	406.83		
6%	125.75	103.13	324.52		
7%	102.79	82.89	265.73		
8%	85.56	67.70	221.64		
9%	72.17	55.89	187.35		
10%	61.45	46.44	159.91		
11%	52.68	38.71	137.47		
12%	45.38	32.27	118.76		
13%	39.19	26.82	102.93		
14%	33.89	22.14	89.37		
15%	29.30	18.09	77.61		
16%	25.28	14.55	67.32		
17%	21.74	11.42	58.24		
18%	18.58	8.64	50.17		
19%	15.76	6.16	42.95		
20%	13.23	3.92	36.46		

7. Input/Output Considerations

7.1 Input Capacitance at the Power Module

The converters must be connected to low AC source impedance. To avoid problems with loop stability source inductance should be low. Also, the input capacitors (Cin) should be placed close to the converter input pins to de-couple distribution inductance. However, the external input capacitors are chosen for suitable ripple handling capability. Low ESR capacitors are good choice. Circuit as shown as below represents typical measurement methods for reflected ripple current. C1 and L1 simulate a typical DC source impedance. The input reflected-ripple current is measured by current probe to oscilloscope with a simulated source Inductance (L1).



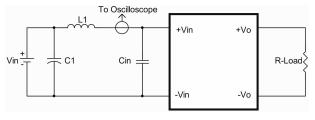


L1: 12uH C1: 220uF/200V ESR<0.047Ω Cin: 220uF/200V ESR<0.047Ω

7.2 Hold up Time

Hold up time is defined as the duration of time that the DC/DC converter output will remain active following a loss of input power. The BUS pin is for hold up time function. It is designed to work with an external circuit comprises C5. When input power supply is interrupt, the CQB100W14-72S series use the energy stored in C5 to support operation.

A typical configuration shows as below.

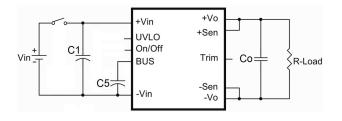

C1: 220uF/200V ESR<0.047Ω


If hold up time function is not needed, please remove the component(C5). This function provides energy that maintains the DC-DC converter in operation for 10mS and 30mS hold up time. The capacity (C1 & C5) in the application is recommended as below.

N						
Vin C1/C5		24V	36V	48V		
For 10 mS	C1	220uF				
	C5	12200uF	10000uF	10000uF		
For 30 mS	C1	220uF				
	C5	30000uF	20000uF	20000uF		
Vin C1/C5		72V	96V	110V		


01/00	\sim				
For 10 mS	C1	220uF			
	C5	6800uF	4700uF	4700uF	
For 30 mS	C1	220uF			
	C5	16800uF	14700uF	14700uF	

7.3 Input Derating Curve

CQB100W14 series has Derating by Input Voltage is required shown below.

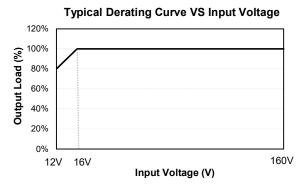

7.4 Output Ripple and Noise

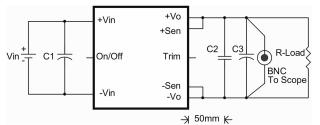

C1: 220uF/200V ESR<0.047Ω

C2: 1uF/1210 ceramic capacitor

C3: 10uF polymer tantalum capacitor (ESR $\leq 0.05\Omega$)


Output ripple and noise measured with 10uF polymer tantalum capacitor and 1uF ceramic capacitors across output. A 20 MHz bandwidth oscilloscope is normally used for the measurement.

The conventional ground clip on an oscilloscope probe should never be used in this kind of measurement. This clip, when placed in a field of radiated high frequency energy, acts as an antenna or inductive pickup loop, creating an extraneous voltage that is not part of the output noise of the converter.





Another method is shown in below, in case of coaxialcable/BNC is not available. The noise pickup is eliminated by pressing scope probe ground ring directly against the -V_{out} terminal while the tip contacts the +V_{out} terminal. This makes the shortest possible connection across the output terminals.

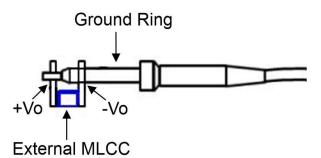


7.5 Output Capacitance

The CQB100W14 series converters provide unconditional stability with or without external capacitors. For good transient response, low ESR output capacitors should be located close to the point of load (<100mm). PCB design emphasizes low resistance and inductance tracks in consideration of high current applications. Output capacitors with their associated ESR values have an impact on loop stability and bandwidth. Cincon's converters are designed to work with load capacitance to see specifications.

8. Series and Parallel Operation

8.1 Series Operation

Series operation is possible by connecting the outputs two or more units. Connection is shown in below. The output current in series connection should be lower than the lowest rate current in each power module.

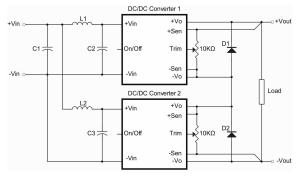


Simple Series Operation Connect Circuit

L1, L2: 1.0uH C1, C2, C3: 220uF/200V ESR<0.047Ω

Note:

- 1. If the impedance of input line is high, C1, C2, C3 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.
- 2. Recommend Schottky diode (D1, D2) be connected across the output of each series connected converter, so that if one converter shuts down for any reason, then the output stage won't be thermally overstressed. Without this external diode, the output stage of the shutdown converter could carry the load current provided by the other series converters, with its MOSFETs conducting through the body diodes. The MOSFETs could then be overstressed and fail. The external diode should be capable of handling the full load current for as long as the application is expected to run with any unit shut down.

Series for \pm output operation is possible by connecting the outputs two units, as shown in the schematic below.

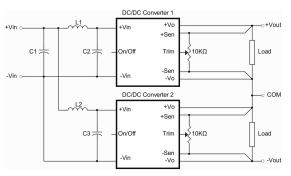

Simple ±Output Operation Connect Circuit

L1, L2: 1.0uH

C1, C2, C3: 220uF/200V ESR<0.047Ω

Note:

If the impedance of input line is high, C1, C2, C3 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.


8.2 Parallel Operation

The CQB100W14 series parallel operation is not possible.



8.3 Redundant Operation

Parallel for redundancy operation is possible by connecting the units as shown in the schematic below. The current of each converter become unbalance by a slight difference of the output voltage. Make sure that the output voltage of units of equal value and the output current from each power supply does not exceed the rate current. Suggest use an external potentiometer to adjust output voltage from each power supply.

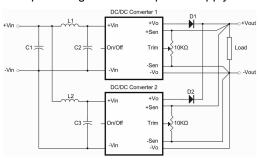

Simple Redundant Operation Connect Circuit

L1, L2: 1.0uH C1, C2, C3: 220uF/200V ESR<0.047Ω

Note:

If the impedance of input line is high, C1, C2, C3 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.



9. Thermal Design

9.1 Operating Temperature Range

The CQB100W14 series converters can be operated within a wide case temperature range of -40°C to 105°C. Consideration must be given to the derating curves when ascertaining maximum power that can be drawn from the converter. The maximum power drawn from open quarter brick models is influenced by usual factors, such as:

- Input voltage range
- Output load current
- Forced air or natural convection
- Heat sink optional

9.2 Convection Requirements for Cooling


To predict the approximate cooling needed for the quarter brick module, refer to the power derating curves in **section 9.4**. These derating curves are approximations of the ambient temperatures and airflows required to keep the power module temperature below its maximum rating. Once the module is assembled in the actual system, the module's temperature should be monitored to ensure it does not exceed 105°C as measured at the center of the top of the case (thus verifying proper cooling).


9.3 Thermal Considerations

The power module operates in a variety of thermal environments; however, sufficient cooling should be provided to help ensure reliable operation of the unit. Heat is removed by conduction, convection, and radiation to the surrounding environment. The example is presented in **section 9.4**. The power output of the module should not be allowed to exceed rated power ($V_{o_set} \times I_{o_max}$).

9.4 Power Derating

The operating case temperature range of CQB100W14 series is -40°C to +105°C. When operating the CQB100W14 series, proper derating or cooling is needed. The maximum case temperature under any operating condition should not exceed 105°C.



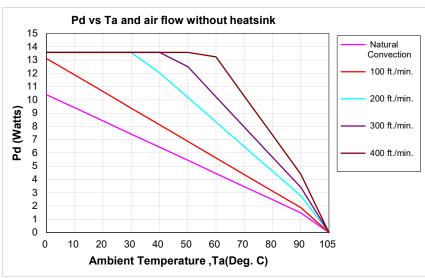

AIR FLOW RATE	TYPICAL R _{ca}
Natural Convection 20ft./min. (0.1m/s)	10.1 °C/W
100 ft./min. (0.5m/s)	8.0 °C/W
200 ft./min. (1.0m/s)	5.4 °C/W
300 ft./min. (1.5m/s)	4.4 °C/W
400 ft./min. (2.0m/s)	3.4 °C/W



Example:

What is the minimum airflow necessary for a CQB100W14-72S12 operating at nominal line voltage, an output current of 8.3A, and a maximum ambient temperature of 50°C?

Solution:

Given: V_{in} =72 V_{dc} , V_o =12 V_{dc} , I_o =8.3A

Determine power dissipation (P_d): P_d=P_i-P_o=P_o(1-η)/η, P_d=12×8.3×(1-0.88)/0.88=13.58Watts

Determine airflow: Given: Pd=13.58W and Ta=50°C


Check power derating curve: Minimum airflow= 400ft./min.

Verify:

Maximum temperature rise is $\Delta T=P_d \times R_{ca}=13.58 \times 3.4=46.172^{\circ}C$ Maximum case temperature is $T_c=T_a + \Delta T=96.172^{\circ}C < 105^{\circ}C$

Where:

The R_{ca} is thermal resistance from case to ambient environment T_a is ambient temperature and T_c is case temperature

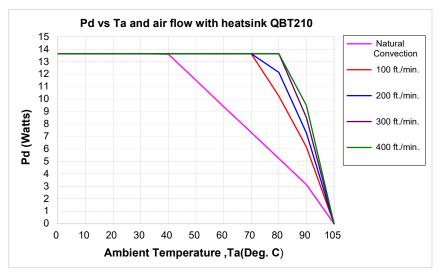

AIR FLOW RATE	TYPICAL R _{ca}
Natural Convection 20ft./min. (0.1m/s)	4.78 °C/W
100 ft./min. (0.5m/s)	2.44 °C/W
200 ft./min. (1.0m/s)	2.06 °C/W
300 ft./min. (1.5m/s)	1.76 °C/W
400 ft./min. (2.0m/s)	1.58 °C/W

Example with heat sink QBT210 (M-C421):

What is the minimum airflow necessary for a CQB100W14-72S12 operating at nominal line voltage, an output current of 8.3A, and a maximum ambient temperature of 65°C?

Solution:

Given: Vin=72Vdc, Vo=12Vdc, Io=8.3A

Determine power dissipation (Pd): $P_d = P_i - P_0 = P_0(1-\eta)/\eta$, $P_d = 12 \times 8.3 \times (1-0.88)/0.88 = 13.58$ Watts

Determine airflow: Given: Pd=13.58W and Ta=65°C

Check above power de-rating curve: Minimum airflow=100ft./min.

Verify:

Maximum temperature rise is $\Delta T=P_d \times R_{ca}=13.58 \times 2.44=33.14^{\circ}C$ Maximum case temperature is $T_c=T_a+\Delta T=98.14^{\circ}C<105^{\circ}C$

Where:

The R_{ca} is thermal resistance from case to ambient environment T_a is ambient temperature and T_c is case temperature




9.5 Quarter Brick Heat Sinks

Heat sinks assembly refer to Datasheet-Thermal

10. Safety & EMC

10.1 Input Fusing and Safety Considerations

The CQB100W14 series converters have no internal fuse. In order to achieve maximum safety and system protection, always use an input line fuse. We recommended a 12A time delay fuse for all models. It is recommended that the circuit have a transient voltage suppressor diode (TVS) across the input terminal to protect the unit against surge or spike voltage and input reverse voltage (as shown).

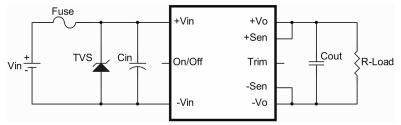

The external input capacitor (Cin) and transient voltage suppressor diode (TVS) are required if CQB100W14 series has to meet EN 61000-4-4, EN 61000-4-5.

The Cin recommended a 220uF/200V (Nippon Chemi-Con KY series) aluminum capacitor. And the TVS recommended a SMCJ180A transient voltage suppressor.

10.2 EMC Considerations

EMI Test standard: EN 55032 Class A/EN 50121-3-2:2016 Conducted & Radiated Emission Test Condition: Input Voltage: 110Vdc, Output Load: Full Load

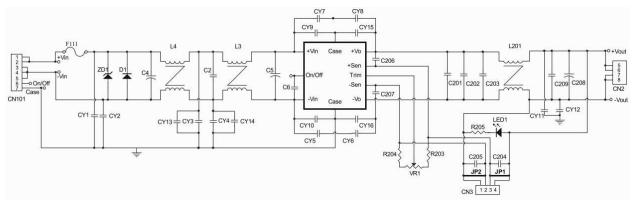


Figure1 Connection Circuit



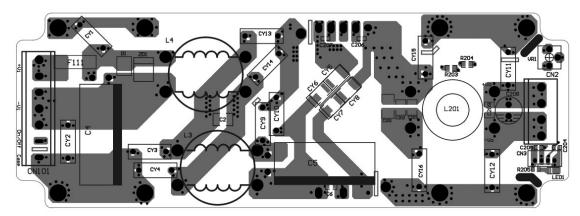


Figure2 PCB Layout Top View

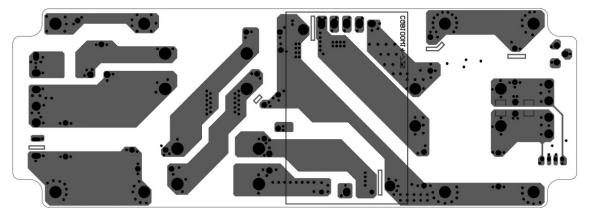


Figure3 PCB Layout Bottom View



Components value:

	Model Number						
Model Name	72S05	72S12	72S15	72S24	72S28	72S54	
C2	1uF/250V SMD						
C4, C5	120uF/220V, Aluminum cap. KXJ series						
C6	4700pF/250V						
C201	47uF/10V SMD	22uF/28	5V SMD	6.8uF/50V SMD		4.7uF/100V SMD	
C202, C203, C209	47uF/16V SMD	10uF/28	5V SMD	10uF/25V SMD 10uF/10 SMD			
CY1		100pF/Y1					
CY2	100pF/Y1			NC			
CY3, CY4		4700pF/Y1					
CY5, CY6, CY7, CY8	1000pF/Y1	2200pF/Y1		NC			
CY9	2200pF/Y1						
CY10	3300pF/Y1	1000pF/Y1					
CY11, CY12	0.022uF X2 cap	4700pF/Y1		0.022uF X2 cap			
CY13	2200	200pF/Y1 NC					
CY14	2200	pF/Y1	470pF/Y1	NC			
CY15, CY16	4700pF/Y1			0.022uF X2 cap			
L3, L4	0.8mm*2/10T 3.88mH~7.53mH TMC20-11-8-A(E) 21.5*9.5*9.5mm COATED TECH MOUNT						
L201	0.8mm*4/4T 0.352mH-0.683mH FCN0179C WELL LIGHT		0.8mm*2/8T 1.55mH-2.59mH FCN0179C WELL LIGHT		0.55mm*2/13T 4.1mH-6.8mH FCN0179C WELL LIGHT		
F111	15A/250V SMD						
CN101	EK500V-07P DINKLE						
CN2	EK500V-04P DINKLE						
CN3	WAFER DIP AC-DC Nylon UL 94V-0 P110I-04 4PIN						
VR1	VR DIP GF063P1-B103 0.5W 10K ±10% TOCOS						
LED1	MS-PT3216ZGSC STONE						
MINI JUMPER	HMJ20-02O-95BS (USING IN CN3)						
R203	100R	510R	100R	2K	100R	3.6K	
R204	2.49K	1.8K	1.8K	1.8K	2.7K	510R	
R205	100K	100K	100K	200K	200K	200K	
ZD1	SMCJ180A, LITTELFUSE						
D1	STTH8R03DJF-TR, ST						
BEAD CORE	SN030 T2.8*1.7*1.2 SM for CY1, CY9, CY10, CY11, CY12, CY13, CY14						




Note:

F111: 0463015.ER LITTELFUSE
C2, C201: 1812 X5/X7R ceramic.
C202, C203, C209: 1210 X5R/X7R/X7S ceramic
C6: 0805 X7R ceramic.
C4, C5: NIPPON CHEMI-CON KXJ series aluminum capacitor or equivalent
CY1~CY10, CY13~CY16: TDK Y1 capacitor or equivalent
CY11, CY12 (05,24,28,54 V_{out}): CARLI MPX Series X2 capacitor or equivalent
CY11, CY12 (12,15 V_{out}): TDK Y1 capacitor or equivalent




Conducted Emission (Input):


CQB100W14-72S05

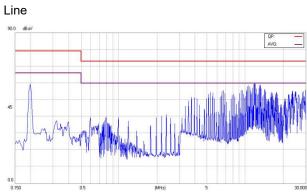



CQB100W14-72S12



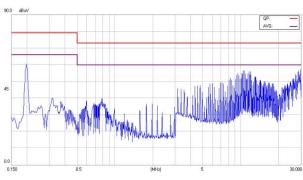




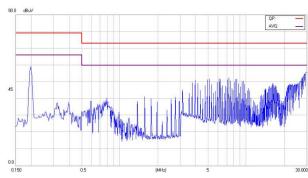


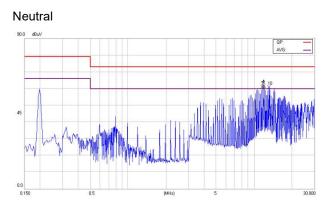

Neutral

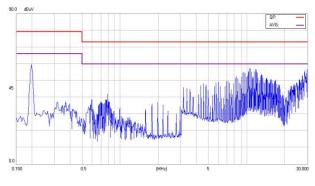



Neutral

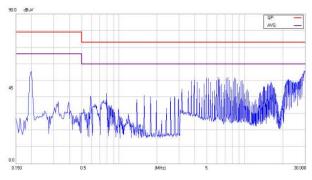




CQB100W14-72S24

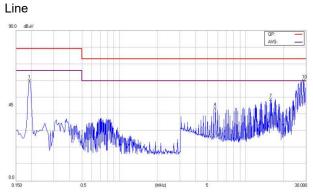


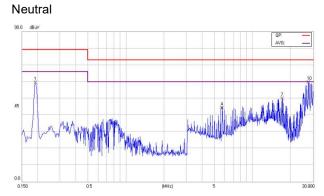


CQB100W14-72S28

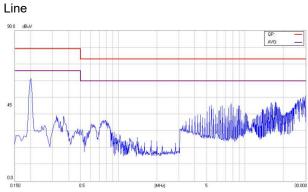


0150 05 CQB100W14-72S54

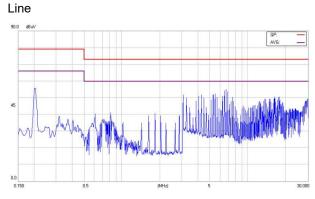

Neutral

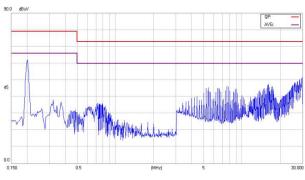

Neutral

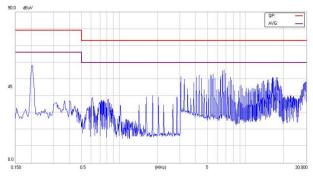




Conducted Emission (Output):


CQB100W14-72S05




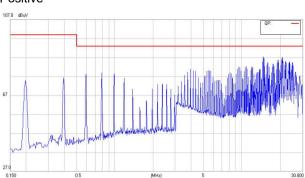



CQB100W14-72S12 Positive



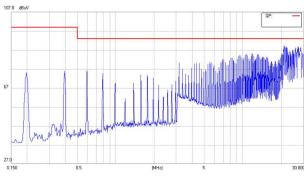




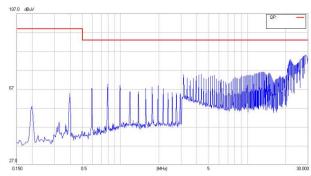


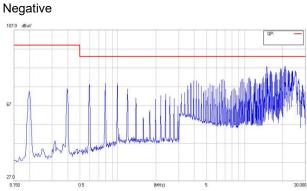

Negative

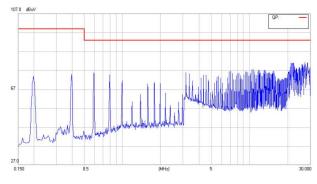


Negative

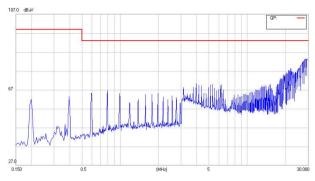




CQB100W14-72S24

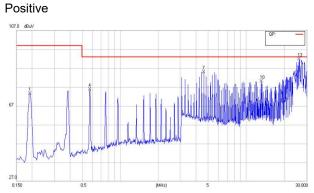


Negative 107.0 dBuV

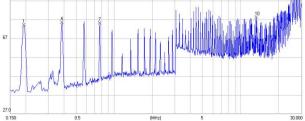


30.000


CQB100W14-72S28 Positive

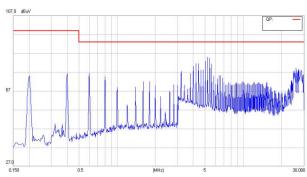


CQB100W14-72S54 Positive

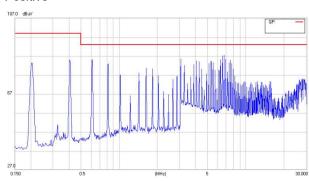

Negative

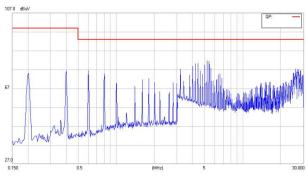



Negative

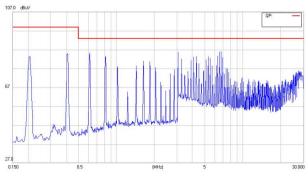





Radiated Emission:

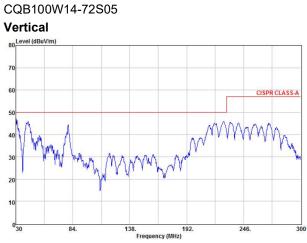

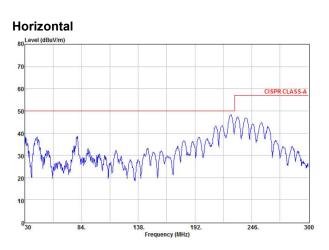


CQB100W14-72S12 Vertical

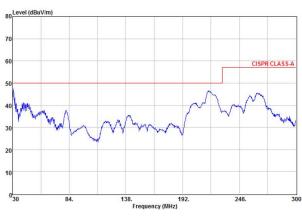





Vertical

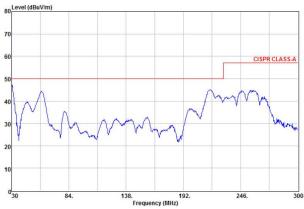




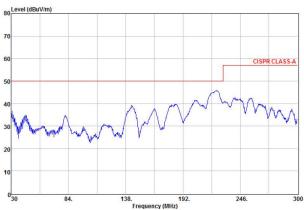


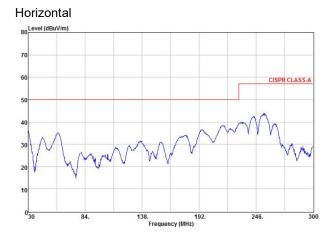





CQB100W14-72S24

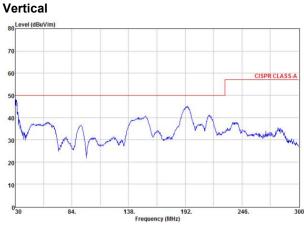




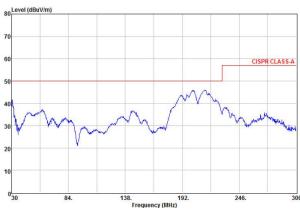







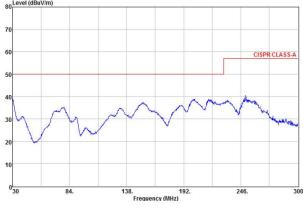




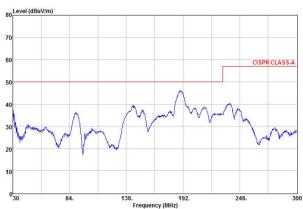

Horizontal

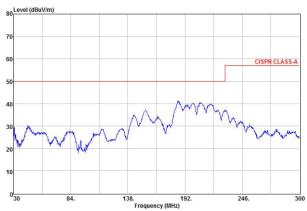




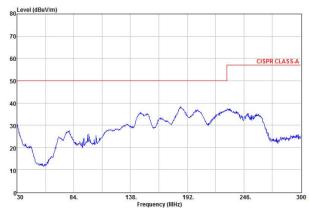



,10.3 Suggested Configuration for RIA12 Surge Test

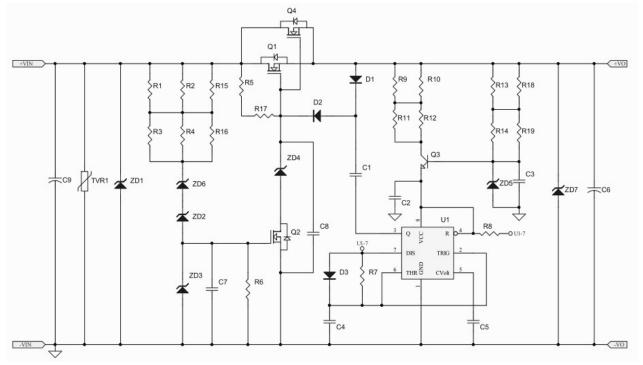

Headquarters:

14F, No.306, Sec.4, Hsin Yi Rd. Taipei, Taiwan Tel: 886-2-27086210 Fax: 886-2-27029852 E-mail: <u>sales@cincon.com.tw</u> Web Site: https://www.cincon.com

CINCON ELECTRONICS CO., LTD.

Factory:

No. 8-1, Fu Kung Rd. Fu Hsing Industrial Park Fu Hsing Hsiang, ChangHua Hsien, Taiwan Tel: 886-4-7690261 Fax: 886-4-7698031

Cincon North America:

1655Mesa Verde Ave. Ste 180 Ventura, CA93003 Tel: 805-639-3350 Fax: 805-639-4101 E-mail: <u>info@cincon.com</u>